



Quick guide to Watts Vision Underfloor Heating: Setting a room thermostat P-6670


1. Press and hold OK button until Channel 1 **flashes with a green light**. (The antenna must be connected to the master via the plug at the top).

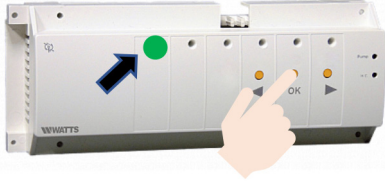

5. Press the OK button once and channel 2 **lights up red** and is ready to pair the next room thermostat.
6. Repeat steps 3, 4 and 5 to pair the subsequent room thermostats.

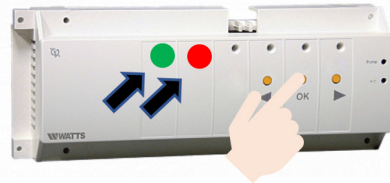


2. Press the OK button once and channel 1 **lights up red**.

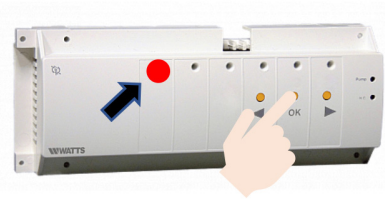


7. Press and hold the OK button for 5 seconds when all the room thermostats are paired. The pairing is stored.



3. Hold down the button on the back of the room thermostat. Release button when 4 squares appear on the left side of the display. The IIT I symbol flashes on the display

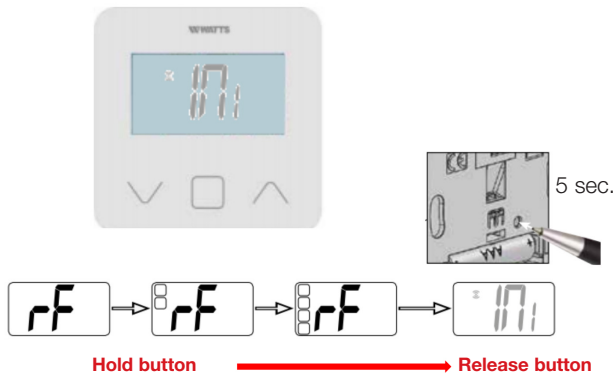


8. The pairing can be tested by turning up the temperature on the room thermostat. The paired Channel on the master (in this example channel 3) will switch on and lights up red. The pump is switch on after approx. 1 minute and lights up green.

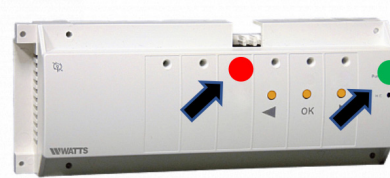

If you want to start over, hold the two arrow buttons down simultaneously for approx. 5 seconds. This resets both the master and the room thermostats, which are ready for new pairing.

4. Channel 1 on the master **lights up green** and channel 2 **flashes green**.

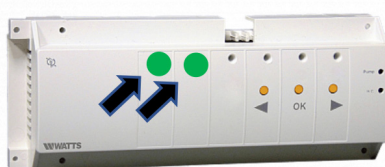

The descriptions and photographs contained in this product specification sheet are supplied by way of information only and are not binding. Watts Industries Nordic AB reserves the right to carry out any technical and design improvements to its products without prior notice. Warranty: All sales and contracts for sale are expressly conditioned on the buyer's assent to Watts terms and conditions found on its website at www.wattsindustries.com. Watts hereby objects to any term, different from or additional to Watts terms, contained in any buyer communication in any form, unless agreed to in a writing signed by an officer of Watts.